




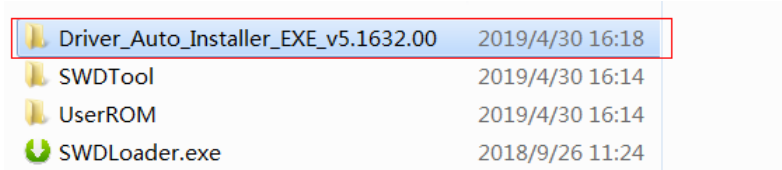

# SW download tools SOP

Attention:


- 1.Phone battery power about 10% or more;
- 2.install the drive;







 Driver_Auto_Installer_EXE_v5.1632.00	2019/4/30 16:18
 SWDTool	2019/4/30 16:14
 UserROM	2019/4/30 16:14
 SWDLoader.exe	2018/9/26 11:24
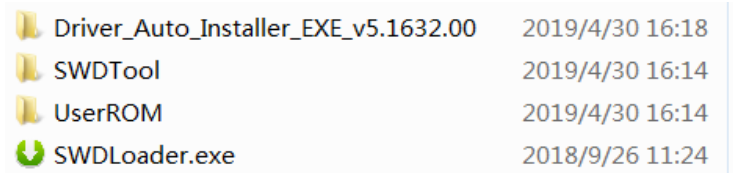
## 1. Tools

1.1 tools refer to picture 1.1:




 Driver_Auto_Installer_EXE_v5.1632.00	2019/4/30 16:18
 SWDTool	2019/4/30 16:14
 UserROM	2019/4/30 16:14
 SWDLoader.exe	2018/9/26 11:24

Picture 1.1 tools


1.2 Click the "SWDLoader.exe" button to open the download tool.

## 2. Download tools set

2.1 Click start button

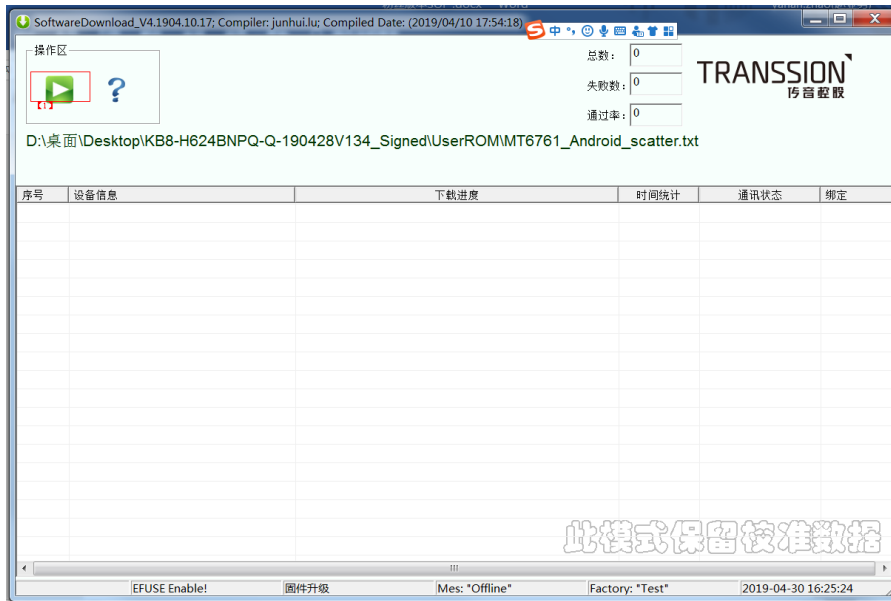


## 2.2 Tool loading SW

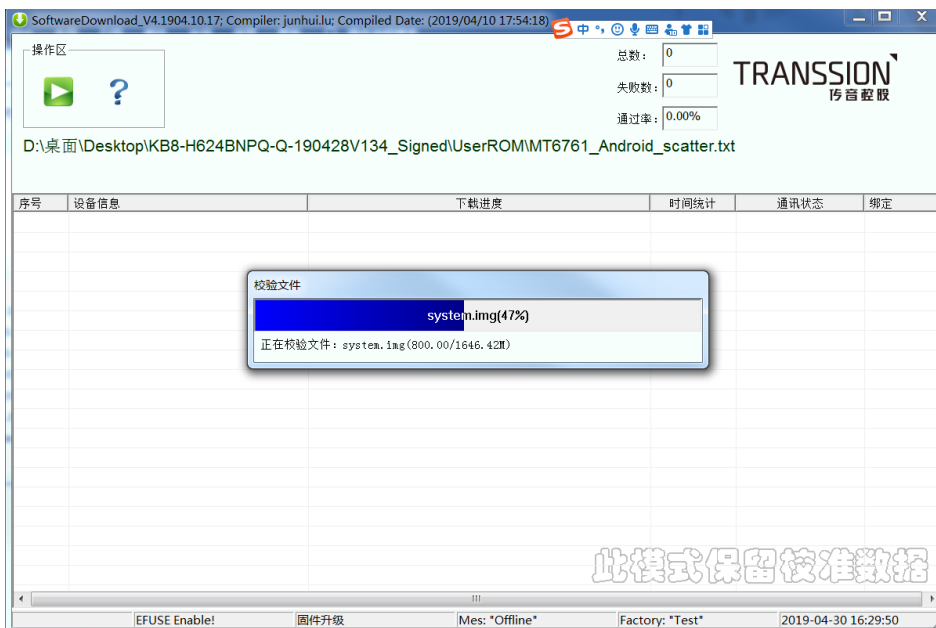

## 3.1 loading

## 2.3 Power off , connect phone via USB

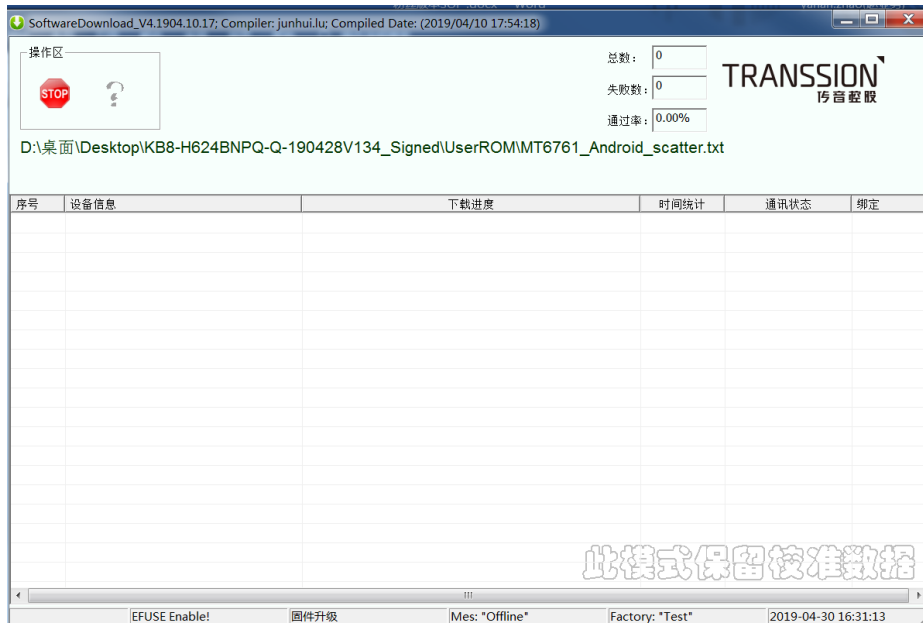

3.2 download

2.4 Download success

序号	设备信息	下载进度	时间统计	通讯状态	绑定
01	(COM3)MediaTek PreLoader USB VCOM (...)	[01]下载完成(100%)	00:01:50	[01]PASS(1/1)	PRELOADE.
02	(COM3)MediaTek PreLoader USB VCOM (...)				PRELOADE.

3.3 download success